



Eton FRX3 Case Assembly Disassembly

Open the Eton FRX3 case.

Written By: zakk



INTRODUCTION

This guide details how to open the Eton FRX3 case, to preform repair tasks on its internals.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [T10 Torx Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Rechargeable Battery Pack



- Pull the plastic tab on the battery compartment cover panel, to loosen it and pull it off.

Step 2



- Disconnect the battery pack wires from the device and remove the battery pack.

Step 3 — Case Assembly



- On the bottom of the device cases face, are two T10 screws. Use a T10 Torx screwdriver to remove the two screws.

Step 4



- Still using the T10 screwdriver, remove the two T10 screws on the back of the devices case.

Step 5



- Remove the two Phillips #00 screws, located in the center of, the back of the device.
- ⓘ You'll need to either use a thin shafted screwdriver or use the female hexagonal bit, found in the ifixit 54 bit toolkit to extend the reach of the Phillips #00 bit.

Step 6



- On the bottom of the device case, are two rubber feet. Pry them off the case.
- ★ Try to keep the adhesive on the rubber feet as clean as possible, to insure they can be reattached during reassembly.

Step 7



- Pull the two halves of the devices case, apart.

⚠ Take care when pulling the two halves apart. There are three cables that connect components of the device, to the motherboard. Disconnect these cable to be able to be able to separate the two half of the devices case.

To reassemble your device, follow these instructions in the reverse order.

This document was last generated on 2017-11-01 05:25:28 PM.